



Description – 5W 6500K LED POD Self Test  
Emergency Non Maintained



# Installation Instructions

Luminaire Code(s) – **AIRMLED/POD/3NM/ST**

### General Installation Instructions

**These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.**

#### Important Safety

1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

#### Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.

#### Exclusions to Warranty

**Please Note** - The limited warranty shall be null and void in the following circumstances:-

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 - 25°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

### INSTALLATION

**Note – This product is compatible with the Ansell AIRMLED/ and AERMLED/ ONLY.**

- Remove the coin plug from the back of the AIRMLED/ or AERMLED LED panel.
- **Within the LED panel there is a pre-cut area of the reflective paper. Please remove this before locking the POD into position.**
- Carefully remove the top housing and re-connect the emergency battery male and female connectors.
- Connect the POD to the plug at the back of the LED panels and rotate clockwise fixing the POD into position.
- Ensure the location provides adequate distance from water pipes, electrical cables, ceiling joists or any other structural obstacles.
- Connect the incoming supply cable to the supply lead of the POD. Ensuring correct polarity is observed (please see below for electrical connections).



#### Electrical Connection

Connect as follows:-

PERMANENT LIVE	(Lch)	BROWN (continuous)
NEUTRAL	(N)	BLUE
EARTH	⊕	GREEN / YELLOW

- **Please Note** :- When the POD is installed the overall height of the LED panel is increased to 56mm.
- Install the AIRMLED/ or AERMLED/ - Please see instructions for the AERMLED/.
- Offer the LED panel into the aperture.

**Please Note** :-

- **Do NOT cover with thermal insulation.**
- **Installing the AIRMLED/POD/3NM/ST in conjunction with an AIRMLED/ or AERMLED/ will increase the overall height to 56mm.**



## Self Test

### Operating and recommended Routine Test Procedure

#### **Please refer to the literature below as to the functionality of Self Test Emergency.**

Read these instructions carefully to ensure safe and reliable operation of this emergency luminaire. The following operations are designed to ensure the continued protection of your premises and occupants, in the event of the possibility of a failure of the normal lighting supply.

- The self test unit inside this product is designed to test the fitting in accordance with current legislation BS EN 62034:2012.
- When the unit is first installed the fitting will randomly select a test date of between 200 and 365 Days.
- Once this date is set it will continue to test at the same time every year for a full 3 hour test.
- Once the product has been on charge for 24hrs, the luminaire will discharge for 5 seconds for test purposes.
- Every 30 days the installation will be tested for 10 minutes.
- The luminaire will show a constant Green LED in normal condition.

During the emergency testing the luminaire will test the following:

- The battery connection
- Emergency operation time
- Lamp / LED operation

Should a fault occur then the following can be observed:

- If there is a failure of the battery such that it becomes disconnected then there will be a continuous red LED.
- If the system fails the 10minute / 3 hour duration test then the red LED will flash slowly
- If the lamp / LED's fail the red LED will flash quickly.

If there is a fault indicated as per any of the above and the luminaire is repairable, the indicated fault will not cease until the repair has been completed and the supply is reinitiated.

Should there be a supply failure to the luminaire the emergency mode will activate. When the supply is reinitiated, the luminaire will continue with the same testing period as before. The self test date will be stored within the luminaire for 7 Days.

### Warning

- Disconnect the mains supply and unplug the battery leads before working on the unit.
- Failure to comply with these instructions may result in irreparable damage to the emergency control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions.



**Operating and recommended Routine Test Procedure**

Follow these instructions carefully to ensure safe and reliable operation of this emergency luminaire. The following testing is designed to ensure the continued protection of your premises and occupants, in the event of the possibility of a failure of the normal lighting supply.

Testing should be carried out in accordance with the recommendations of BS5266-8-2004.

- **A monthly check** – check LED charge indicator is illuminated **GREEN**.
- Should at stage the LED indicator within the fixture display a **RED** output the luminaire must be repaired / replaced immediately. Please refer to diagnostic information on page 2.


To assist with this testing, a test record is included. If the luminaire fails any of the above tests, please contact a qualified electrician.

**Warning**

- Disconnect the mains supply and unplug the battery leads before working on the unit.
- Failure to comply with these instructions may result in irreparable damage to the emergency control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions.

Operating and Recommended Routine Test Procedure

MONTH	TEST	FIRST YEAR		SECOND YEAR		THIRD YEAR		FORTH YEAR		FIFTH YEAR	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	FUNCTIONAL										
2	FUNCTIONAL										
3	FUNCTIONAL										
4	FUNCTIONAL										
5	FUNCTIONAL										
6	FUNCTIONAL										
7	FUNCTIONAL										
8	FUNCTIONAL										
9	FUNCTIONAL										
10	FUNCTIONAL										
11	FUNCTIONAL										
12	3 HOUR										

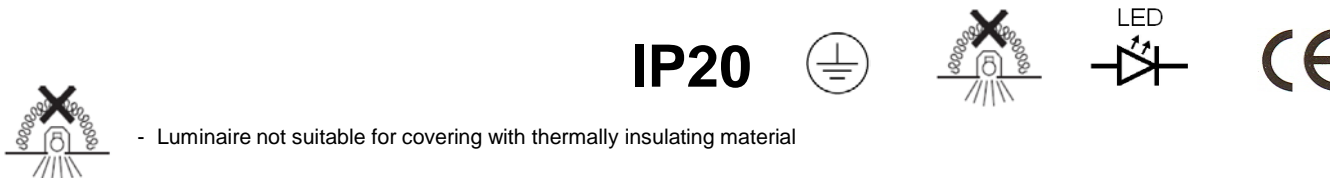

**Disposal of Electronic Equipment WEEE Directive 2002/96/EC**  
 This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.

